FrameKlamp™ fits into SlideChannel™
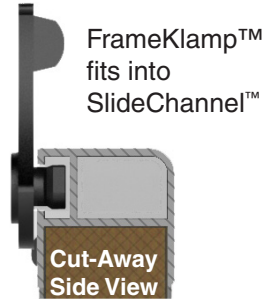
Cut-Away Side View

FrameKlamp™

- FrameKlamp™ SlideChannel™ wall hangers allow you to fine tune whiteboard position, left to right, on your wall.

- Fastens top and bottom of board tightly to your wall.

FrameKlamp™ Installation Instructions

1. Using a level, mark wall at desired height for top edge of your board and at appropriate wall stud locations (⟨) for FrameKlamps™ (figure 1).

2. On back of board frame, measure distance (H) between top and bottom SlideChannels™. Mark wall at distance (H) and at appropriate stud locations (figures 1 & 1a).
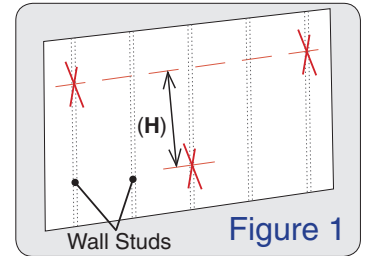
3. Fasten FrameKlamps™ at marked locations using fasteners appropriate for your wall type (figure 2). Fasteners are not included.
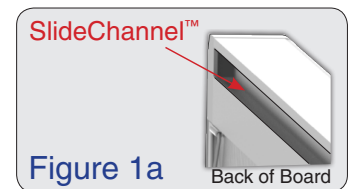
4. With FrameKlamps™ in vertical (unlocked) position, install board over FrameKlamps™, as shown (figure 3).
   Note: Board Hangers are not used with FrameKlamp™ option.

5. Slide board left or right, if necessary, for best location, then pivot FrameKlamps™ into locked position (figures 4, 4a & 4b).
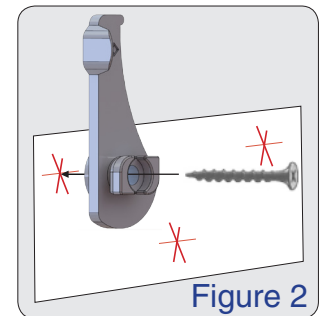   **Caution:** Lightly hold board to wall when adjusting left to right.

(H)
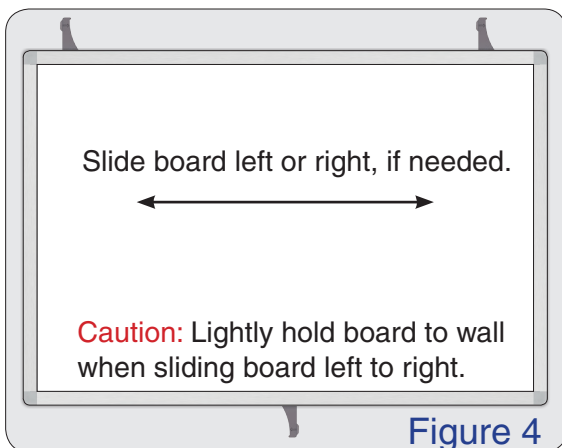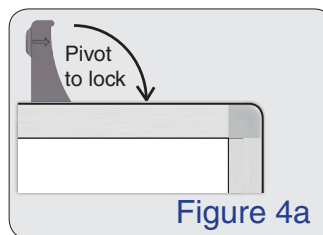
Wall Studs   Figure 1

SlideChannel™

Figure 1a   Back of Board

Figure 2

Slide board left or right, if needed.

Caution: Lightly hold board to wall when sliding board left to right.

Figure 4

Pivot to lock

Figure 4a

Locked Position

Figure 4b

Board hangers are **not used** with FrameKlamps™
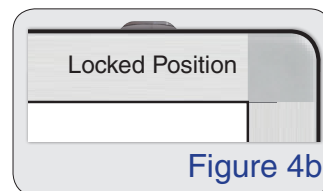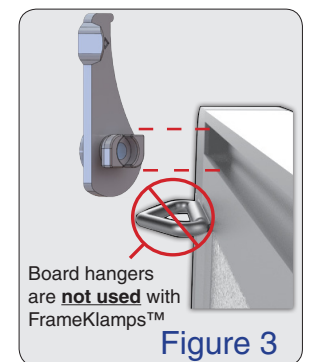
Figure 3

For more information:
See Video ➝
magnatag.com/boardinstall

Since 1967
MAGNATAG®
Visible Systems